


Instructions for finding the ECU number on the 944 & 968 Porsche

Move the left hand front seat fully back & pull back the floor carpet. Remove the four Phillips screws securing the false wooden floor panel.

You should now be able to see the ECU attached to the rear of the metal frame work now exposed.

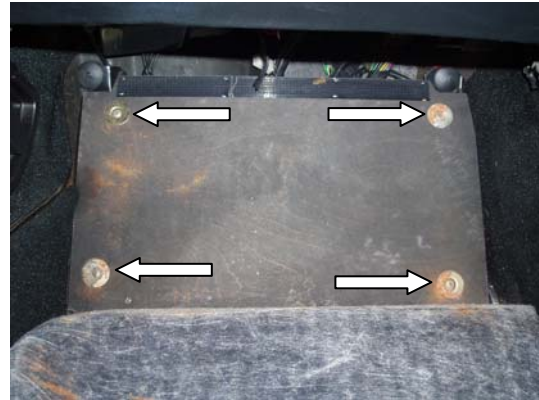

Use a large screwdriver to remove the plastic nuts securing the top of the framework & the Phillips screws that secure the bottom.



The framework should now be loose.

You should now be able to read the Bosch part number that we need this starts 0261 200.



The picture on the right shows the ECU (removed for illustration purposes) so you can see the number from this ECU that reads 0261 200 195 & this is all we need. It also helps to confirm your vehicle year & model when ordering.

